



Slide sensor cable through harness prior to fastening the harness to the motor endbell. Use longer screw provided with sensor wire harness to secure harness into one of the rear endbell holes.

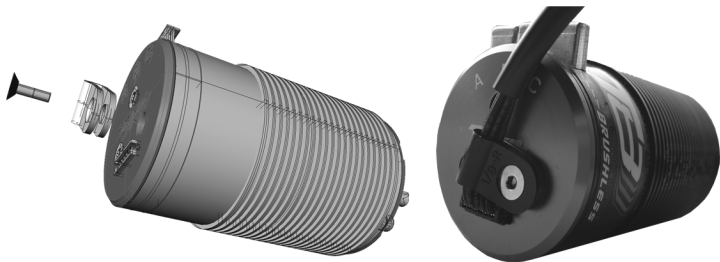

Drill .120" holes to fit #4 screws supplied

FRONT (BUTTON END)
OF RX8 →

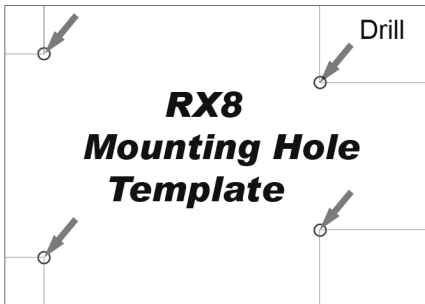

Pilot the holes out and ensure proper alignment.

Sheet should not be resized for printing, it will affect scale of template!